


Unique vacuum-based soft gripper for handling sensitive and delicate objects

piSOFTGRIP®

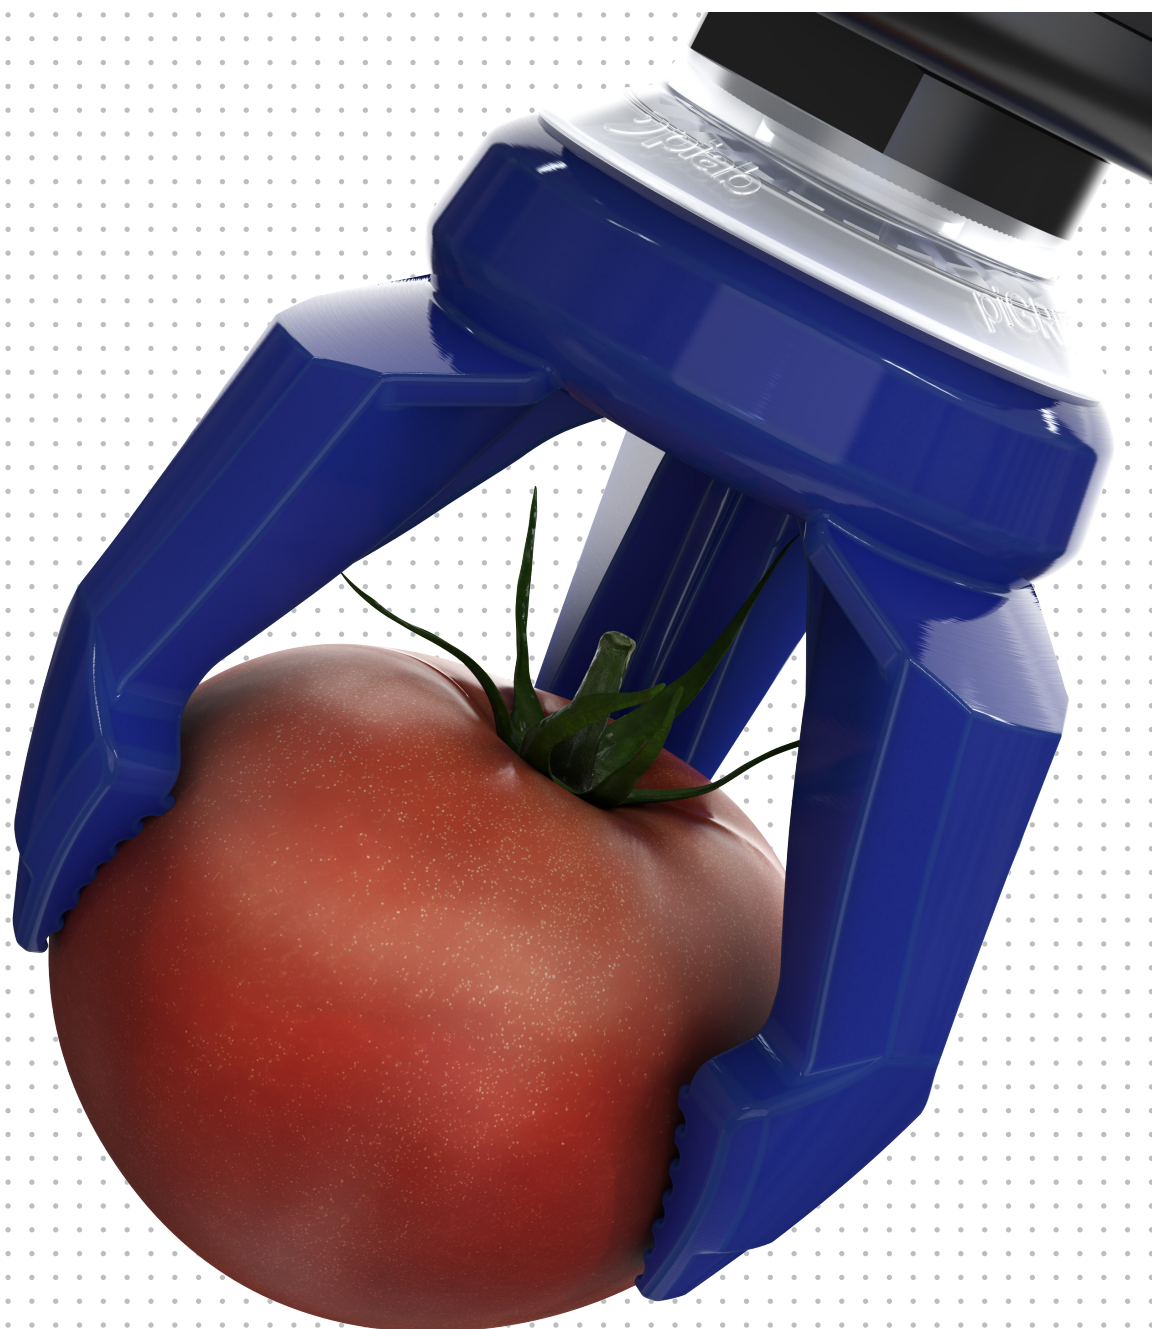


piSOFTGRIP®

A cost-effective soft gripping tool that is developed especially with food industry automation in mind.

The unique piSOFTGRIP® has three gripping fingers and a vacuum cavity, all made in one piece, resulting in a simple and robust product. As it is vacuum-driven, the gripping force is easily adjusted and controlled by the applied vacuum level.

The soft gripper will grip sensitive and lightweight objects of odd geometries and/or an unusual surface. Bin-picking of small irregularly shaped objects, such as toys, is another potential application.



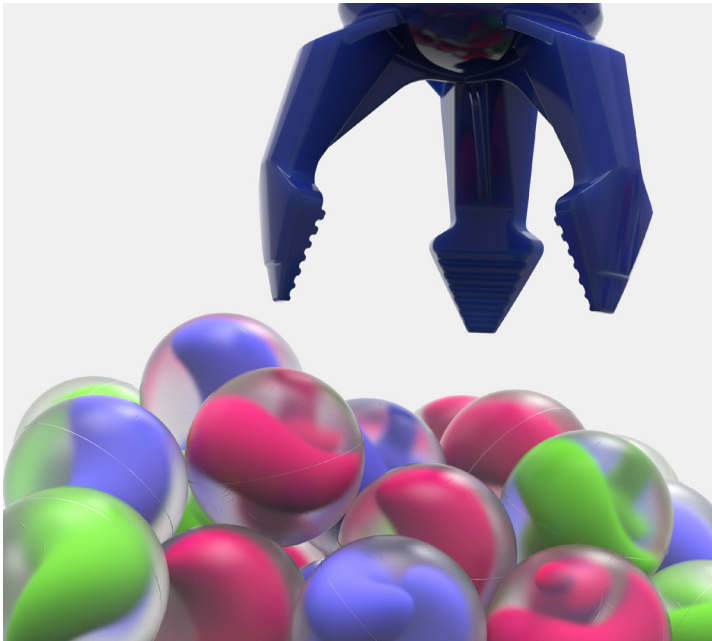

piSOFTGRIP® is great for picking delicate objects and applications involving bin-picking.





First of its kind!

Made in detectable silicone approved for direct contact with food, in accordance with FDA 21 CFR and EU 1935/2004 regulations, the piSOFTGRIP® vacuum gripper is the first of its kind.

The food-compliant silicone gripper enables the food industry to extend their automated food handling to include a wider range of products. Unpackaged, fresh and delicate food items can be handled without risk of being spoiled due to crushing.






Great gripping solution for sensitive and fragile objects

piSOFTGRIP® is an excellent and cost-effective solution for sensitive and fragile objects.

The gripping force can easily be controlled by simply adjusting the vacuum level. The soft gripper can grip objects with a diameter of up to 50mm [1.97"]. Larger models will be introduced at a later stage.



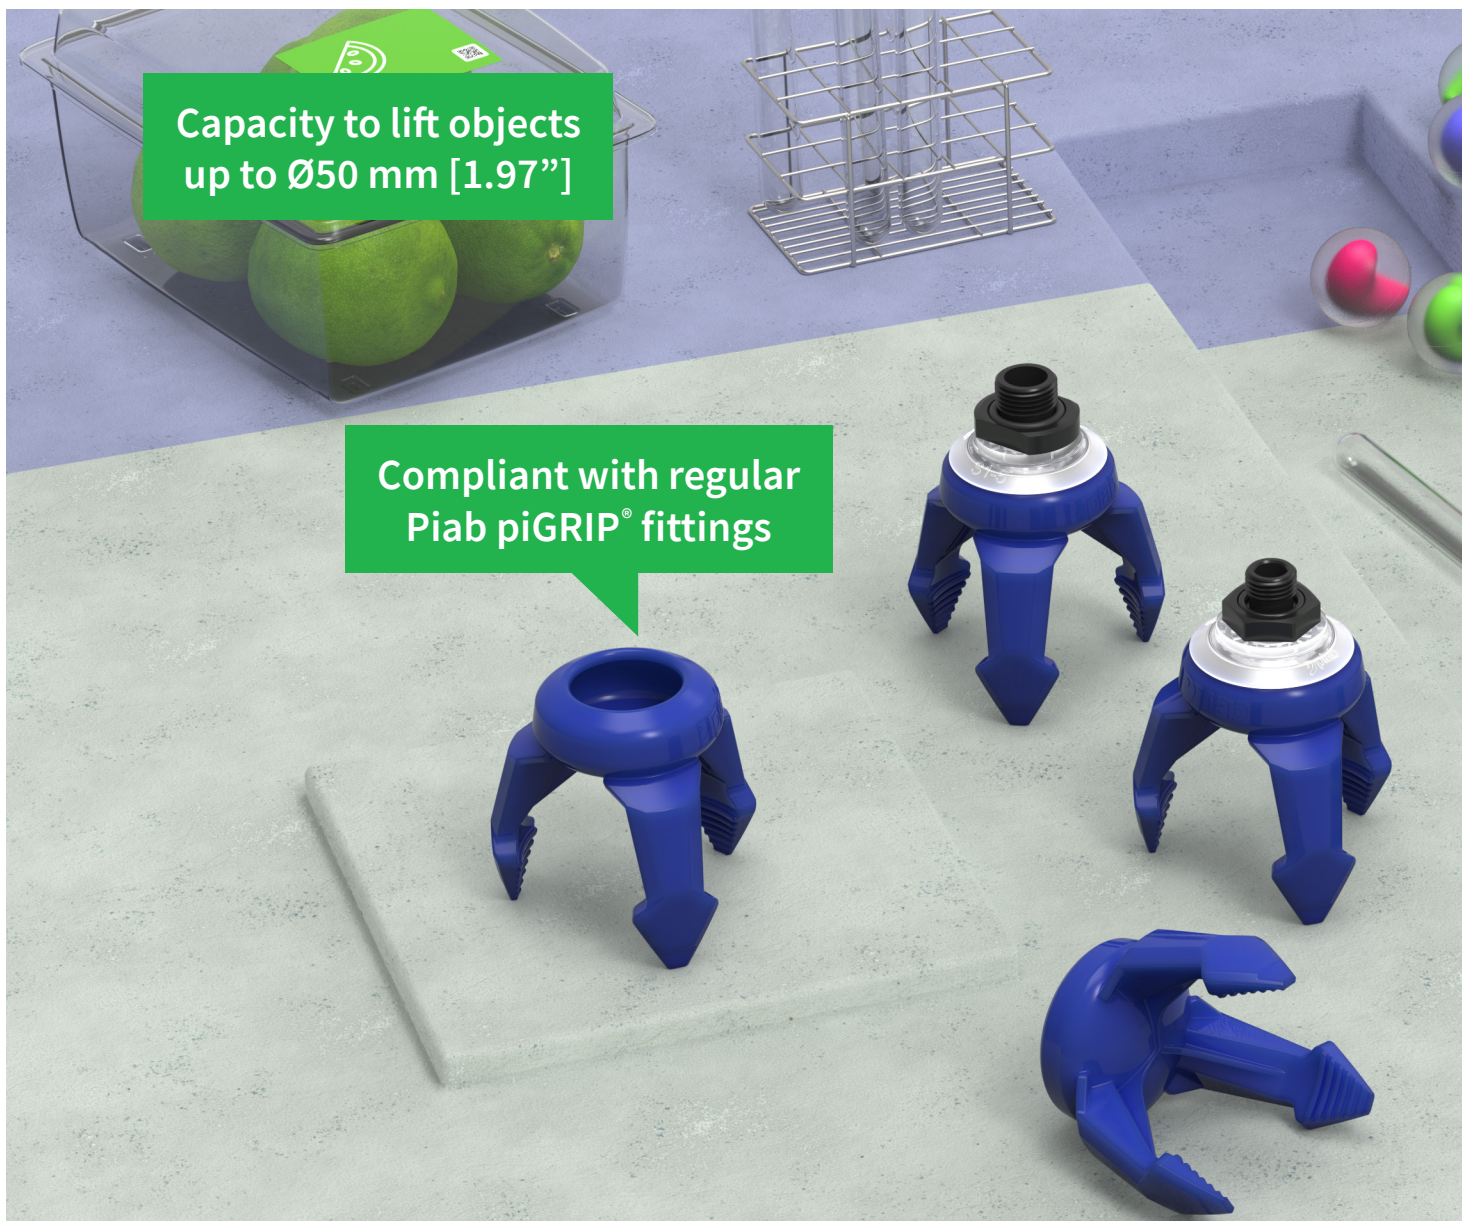

Easy to use and control

The soft gripping vacuum tool is as easy to control and install as a suction cup, and it uses the same fittings as Piab's popular piGRIP® suction cups. An optional stainless-steel fitting offers wash-down provision to assist cleaning. Its intuitive and user-friendly design makes piSOFTGRIP® easy to integrate into automated procedures, where it can help to secure the quality of products and increase overall productivity.


The silicone-made piSOFTGRIP® vacuum gripper is also a lightweight automation tool, which means that very little extra weight is added when fitted to robot arms. It has a building height of approximately 80 mm [3.15"], allowing it to be used even where space is limited.

Combined with Piab's end-of-arm vacuum tool piCOBOT®, the piSOFTGRIP® offers a powerful and flexible "plug and play" extension for collaborative robots. As both piCOBOT® and piSOFTGRIP® offer compressed air saving functionality (ES), virtually no energy is needed to perform a grip and release. The handy and application-friendly soft gripper is already UR certified for such use.

- Vacuum driven soft gripper with simple and robust design
- Cost effective solution for sensitive and delicate objects
- Intuitive and user-friendly design
- As easy to control and install as a suction cup
- Material is food compliant and detectable



Description	Unit	Value
Building height	mm / [inch]	78 / [3.07] (with G3/8" male fitting)
Outer diameter	mm / [inch]	72 / [2.83]
Weight	g / [oz]	55 / [1.94] (with G3/8" male fitting)
Temperature range	C° / [F°]	-20-100 / [-4-212]
Recommended vacuum level	-kPa / [-inHg]	25-70 / [7.5-21]
Recommended object size	mm / [inch]	20-50 / [0.79-1.97]
Recommended max payload	g / [lb]	250 / [0.55]

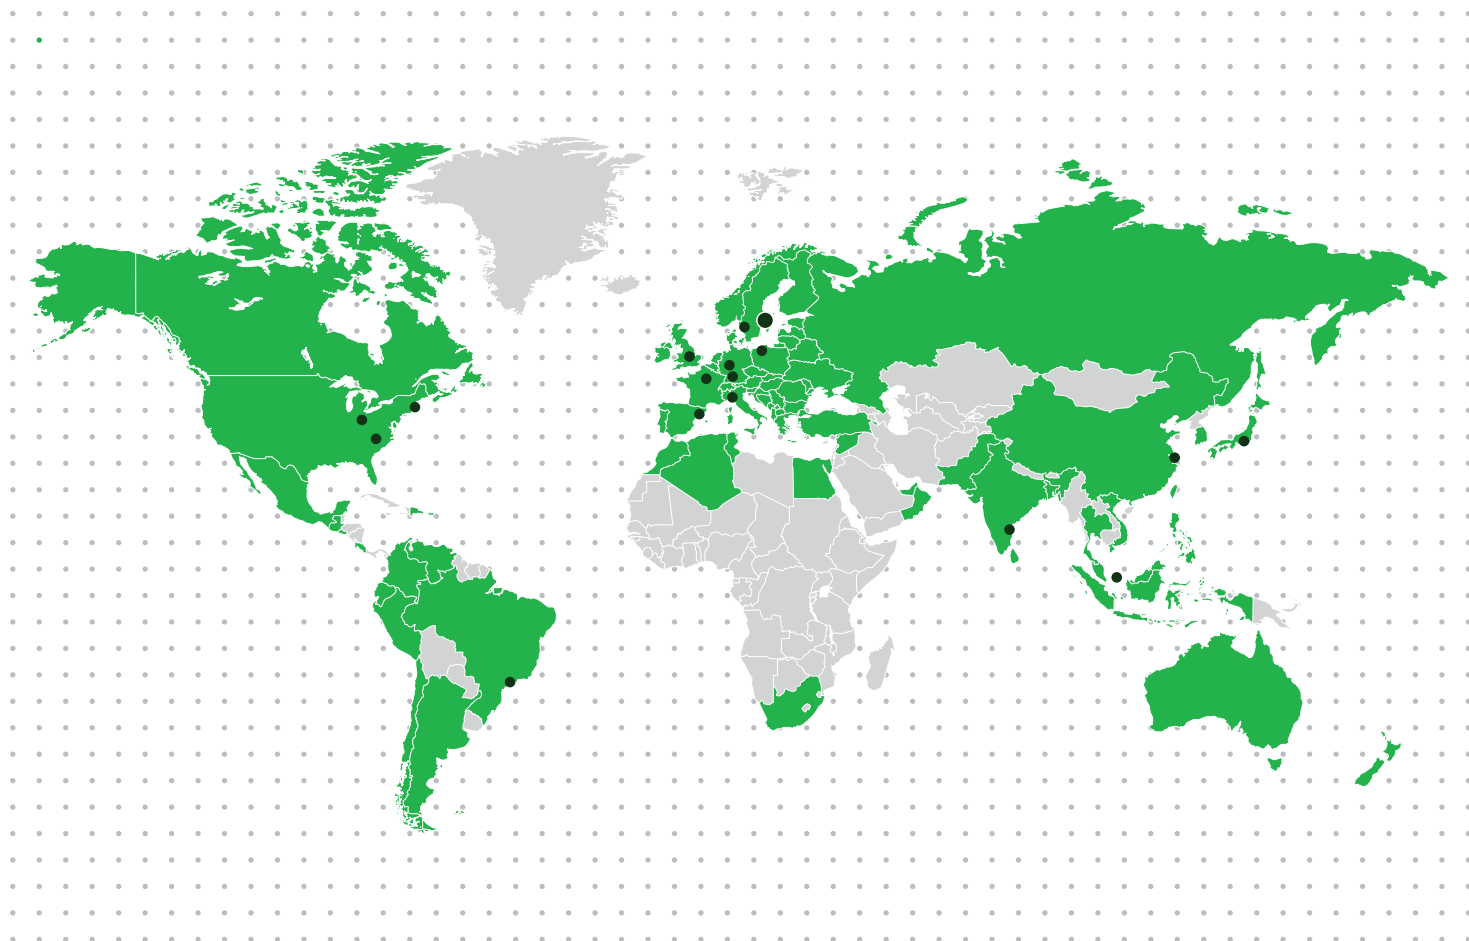

Piab around the world

BRAZIL – Sao Paulo
+55 11 4492 9050
info-brasil@piab.com

CANADA – Hingham MA (US)
+1 781 337 7309
info-usa@piab.com

CHINA – Shanghai
+86 21 5237 6545
info-china@piab.com

FRANCE – Lagny sur Marne
+33 1 6430 8267
info-france@piab.com

GERMANY – Butzbach
+49 6033 7960-0
info-germany@piab.com

GERMANY – Schmallenberg
Robotic Gripping
+49 (0) 29 72/962 17-11
info-germany@piab.com

MEXICO – Hingham MA (US)
+1 781 337 7309
info-mxca@piab.com

INDIA – Chennai
+91 9444 25 36 48
info-india@piab.com

ITALY – Torino
+39 011 226 36 66
info-italy@piab.com

JAPAN – Tokyo
+81 3 6662 8118
info-japan@piab.com

POLAND – Gdansk
+48 58 785 08 50
info-poland@piab.com

SPAIN – Barcelona
+34 93 6333876
info-spain@piab.com

SINGAPORE
+65 6455 7006
info-singapore@piab.com

SWEDEN – Stockholm (HQ)
+46 8 630 25 00
info-sweden@piab.com

SWEDEN – Mölndal
Ergonomic Handling
+46 31 67 01 00
info-sweden@piab.com

UNITED KINGDOM – Loughborough
+44 1509 857 010
info-uk@piab.com

USA – Hingham (MA)
+1 781 337 7309
info-usa@piab.com

USA – Xenia (OH)
Robotic Gripping
+1 888 727 3628
info-usa@piab.com

USA – Charlotte (NC)
Ergonomic Handling
+1 704 527 5052
info-usa@piab.com