

## Kenos Vacuum Gripper – KVG

KVG series represents a flexible solution for the handling manipulation of several products with different shapes, dimensions and porosity due to the double technology available.



- Check valves or flow reducers can fulfill the needs.
- The KVG gripping system can be equipped with integrated vacuum generation or suitable for separated vacuum generation.
- The integrated vacuum generator is a modular multi-stage COAX® ejector of easy maintenance.
- The material of the KVG gripping system is made of a technical foam (FDA material approved available), with different pitch holes and thickness or suction cups.
- Typical applications are palletizing and handling within packaging, metal, glass and wood industry.

## Kenos Heavy Vacuum Gripper – KHVG


KHVG series products, Kenos Heavy Vacuum Gripper, are designed for heavy duty applications in the wood and stone industries.



- KHVG gripping systems are suitable for handling normally complete layers of sawn timber, heavy planking, raw wood and materials for building, such as bricks.
- KHVG systems are prepared for external vacuum generation with side channel blower.
- Provided with shutter check valve technology with low sensibility to dust.
- Applications: Palletizing and handling within packaging, metal, glass and wood industry.

## Kenos Sack Gripper – KSG

KSG series products, Kenos Sack Gripper, are suitable to handle sacks up to 50kg [110 lb] with different shapes, and sack materials.

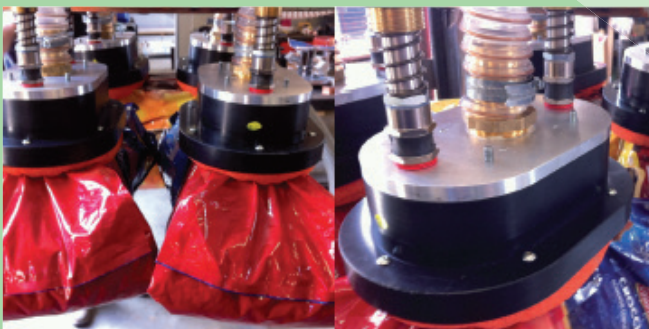

- The specific knowhow in this segment has driven us to develop systems dedicated to all the different applications of sack handling.
- The integrated and modular vacuum generation makes the KSG flexible and reliable.
- A version for external vacuum generator is available.

A part of the Piab group

**KENOS**  
Vacuum gripping systems

## Kenos Vacuum Gripper Layer – KVGL-S

KVGL-S product series, Kenos Vacuum Gripper Layer - Standard, looks at the wide world of packaging, end of line automation and other applications.



- Our adjustable check valve technology and the technical foam allows for superior gripping on different kind of boxes, wrap around packaging and primary ones.
- The large availability of standard dimensioning and the modularity make this series highly effective.

## Kenos Vacuum Layer- Cans Jars – KVGL-CJ

KVGL-CJ series, Kenos Vacuum Layer- Cans Jars, born for the need to handle the complete layer of cans, jars that can be open or covered on the gripping area.



- Typical industrial segments involved are palletizing or de-palletizing in packaging, beverage and food.